 
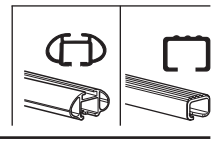 
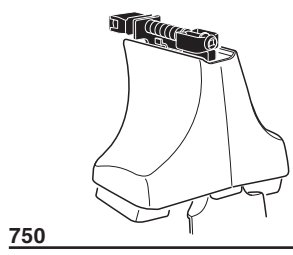 
 
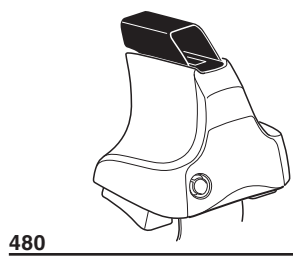 
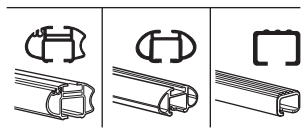 


Kit 1149

HOLDEN Commodore V.T, 4-dr Sedan, 97-05

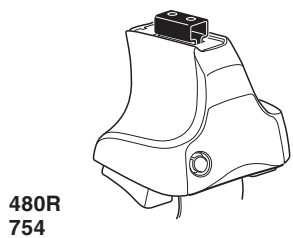

The diagram illustrates the assembly process for a THULE kit. On the left is a THULE box with a warning triangle and a plus sign. In the center is a kit box labeled 'Kit XXXX' with a warning triangle and a plus sign. On the right is a person reading instructions.

480R/754

x1

x4

x4

x4

x4

480

x1

x4

x4

 
x4

750

x1






x4

x4




					
					
					
					
					
					
					
					
					
					
					
					
					
					
					
					
					

Kit

    
 
Diagram showing the assembly of the top rail. A box icon is at the top left. Below it, a vertical L-shaped bracket is labeled '075' and 'x 4'. To its right, a horizontal L-shaped bracket is labeled '04' and 'x 4'. Further right, a square plate with four directional arrows (RR, FR, FL, RL) is labeled 'x 1'.

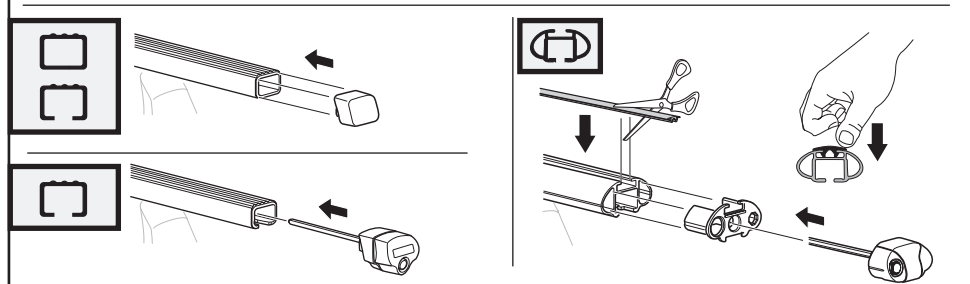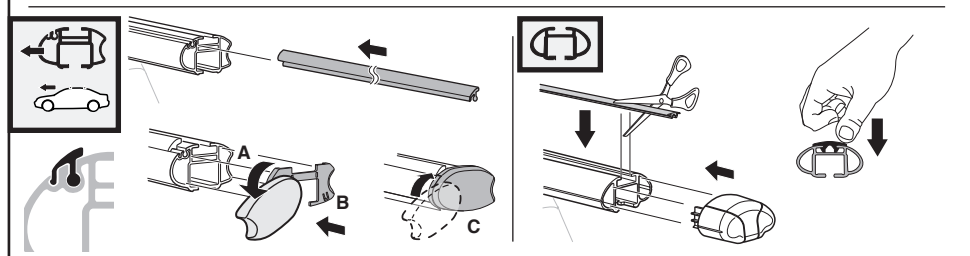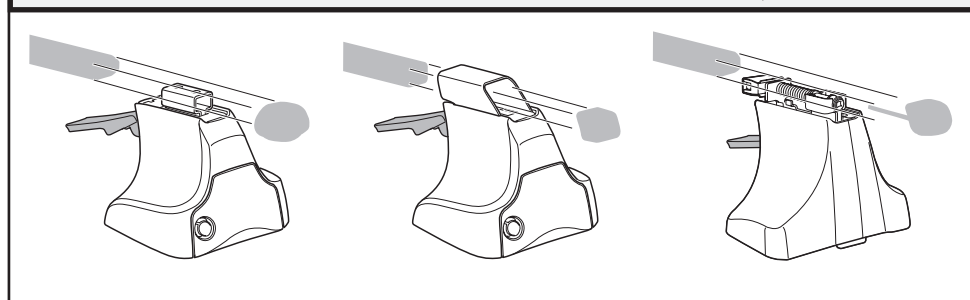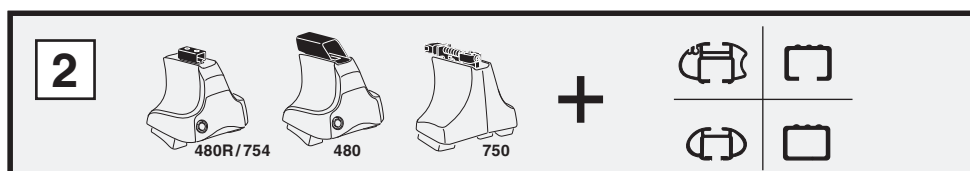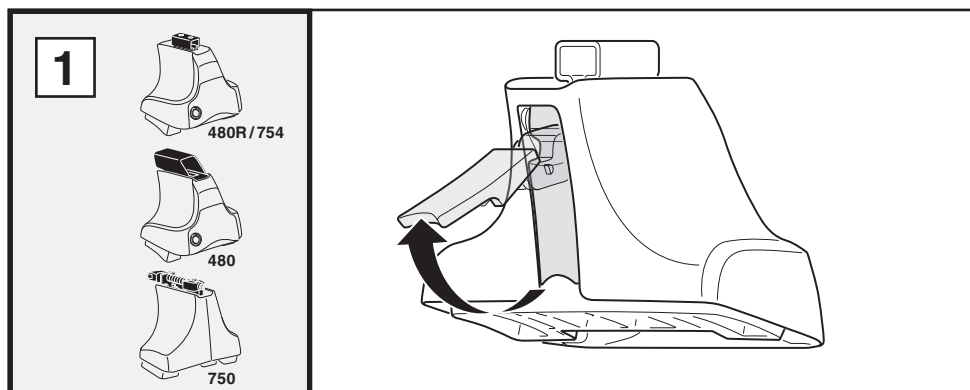

3

   

1

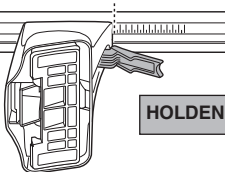  

2

 


HOLDEN Commodore V.T, 4-dr Sedan, 97-05


X

41

1

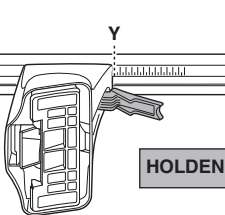

2

 

HOLDEN Commodore V.T, 4-dr Sedan, 97-05

Y

41,5

 


480R



480

1



2



HOLDEN Commodore V.T, 4-dr Sedan, 97-05

 
X inch

41 3/4"

X mm

1061 mm

1



2



HOLDEN Commodore V.T, 4-dr Sedan, 97-05

Y inch

 
 
 
 
 
 
 
 
 
 
 
 
 
42"

Y mm


1066 mm

4




HOLDEN Commodore V.T, 4-dr Sedan, 97-05

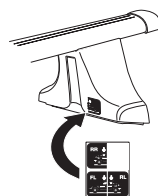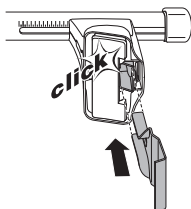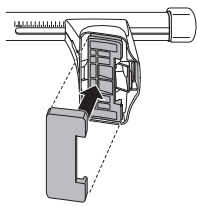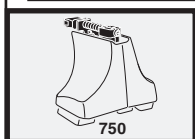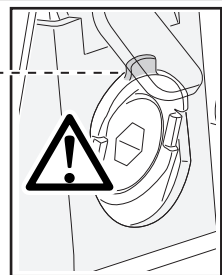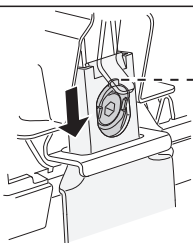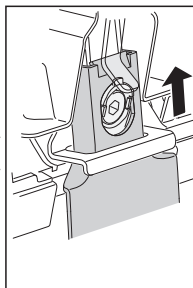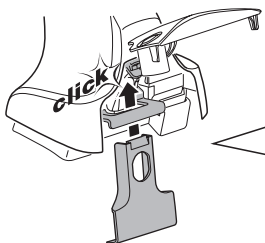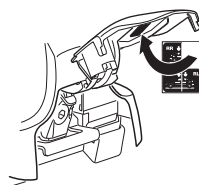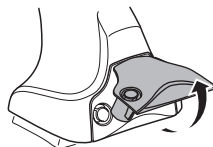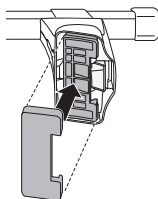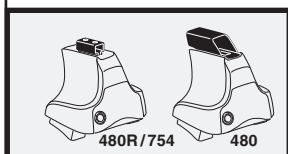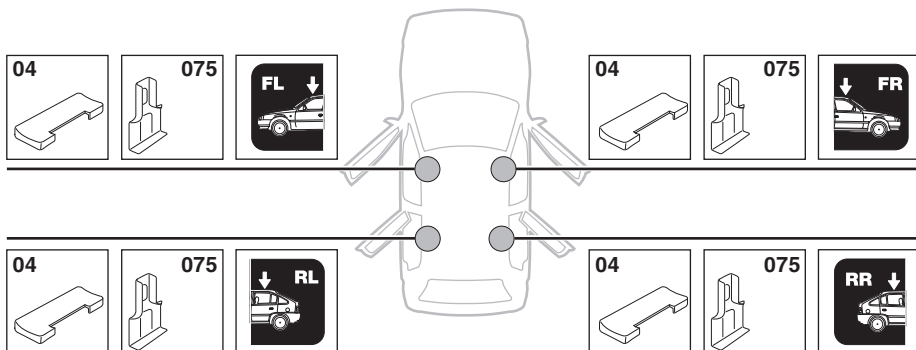

5

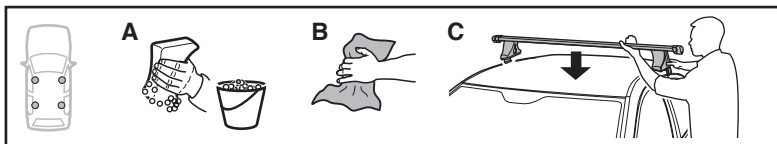 

	X mm	Y mm	X inch	Y inch
HOLDEN Commodore V.T, 4-dr Sedan, 97-05	270 mm	710 mm	10 ⁵/₈ "	28 "

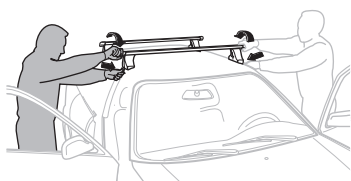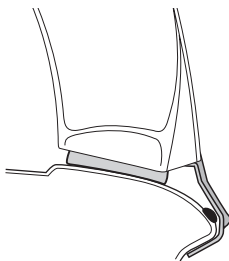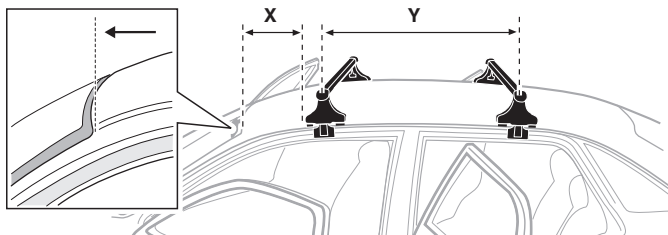   

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Apertar alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pievelciet pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťte bagážníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól fűggetlenül szorítandó

GR Σφιγγετε εναλλάξ

TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชันในแบบสลับ

 
 
 
 
 
6





480R/754



480

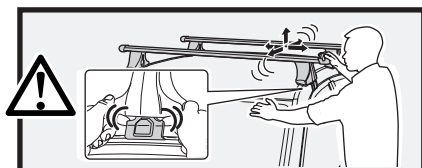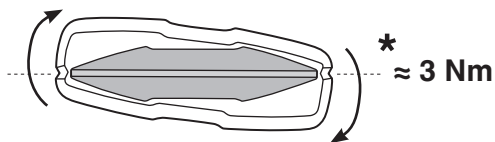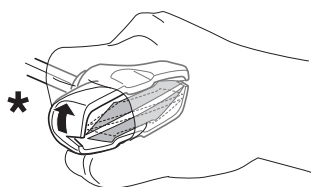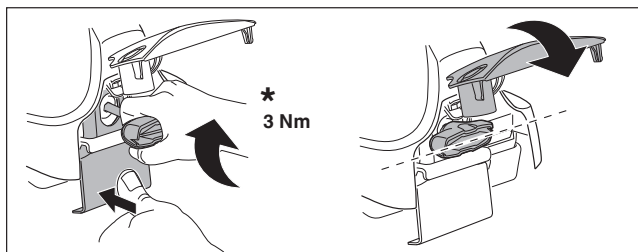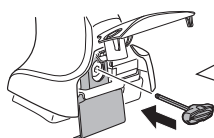

750

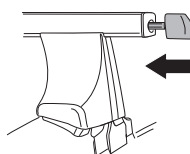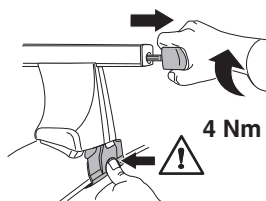  


i




1



 
2

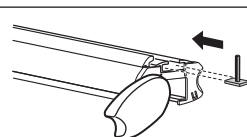


i

 

1

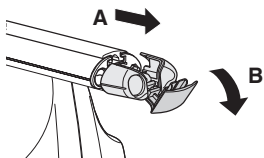 


2

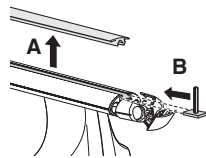 


i








 1

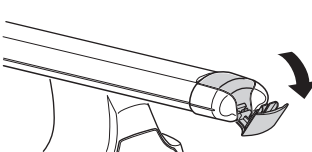

2

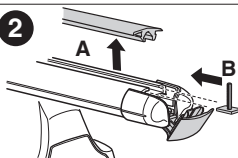 

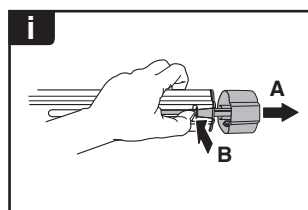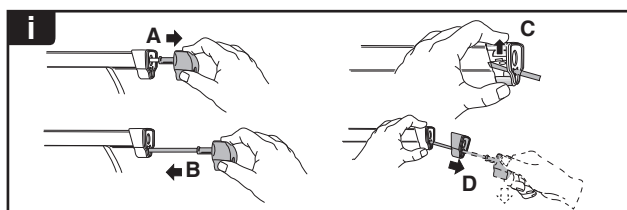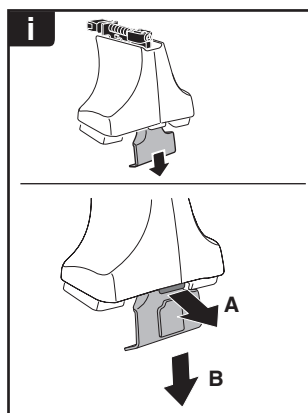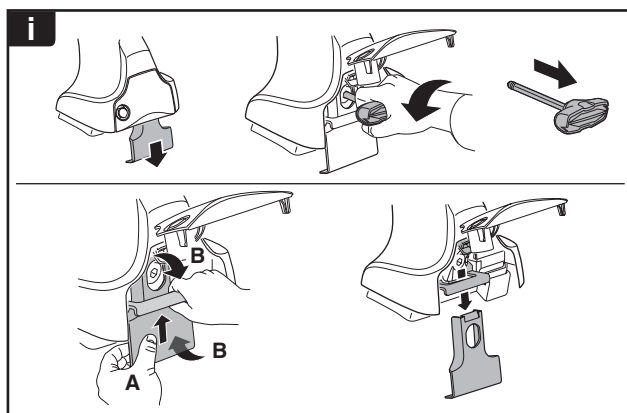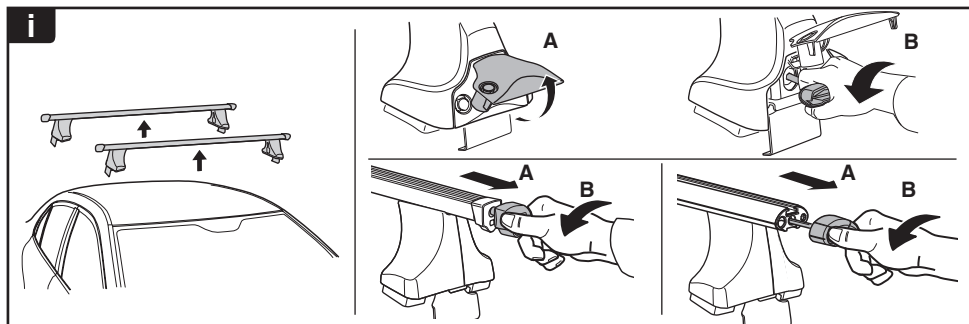     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		