







Thule Rapid System Kit 1804

> Instructions

FORD Grand Tourneo Connect, 5-dr MPV, 14- *

FORD Tourneo Connect, 5-dr MPV, 14- *

*Without flushrail

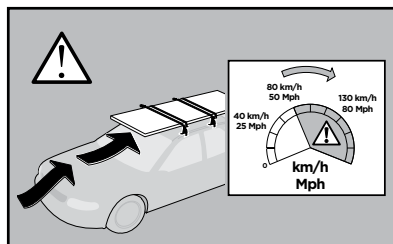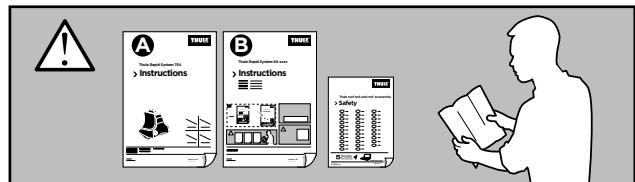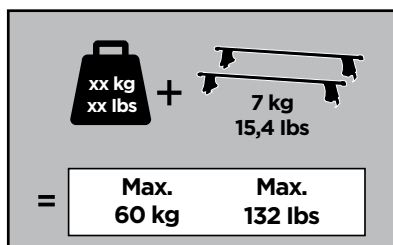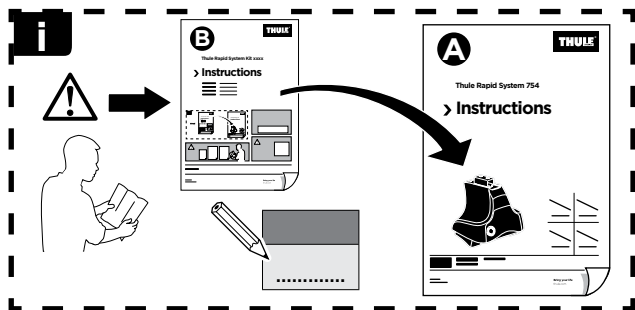

ISO 11154-E


141804
C.20150824
519-1804-02

Bring your life
thule.com



241 x4

350 x4






x1



x1

1

	X (scale)	X (mm)	X (inch)
FORD Grand Tourneo Connect, 5-dr MPV, 14- *	49,5	1146	45 1/8
FORD Tourneo Connect, 5-dr MPV, 14- *	49,5	1146	45 1/8

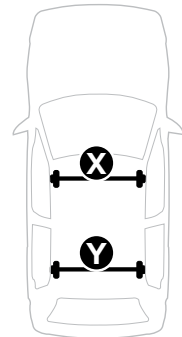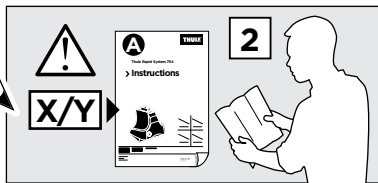
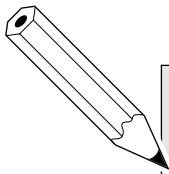


	Y (scale)	Y (mm)	Y (inch)
FORD Grand Tourneo Connect, 5-dr MPV, 14- *	50,5	1156	45 1/2
FORD Tourneo Connect, 5-dr MPV, 14- *	50,5	1156	45 1/2



2

FORD Grand Tourneo Connect, 5-dr MPV, 14-*

FORD Tourneo Connect, 5-dr MPV, 14-*

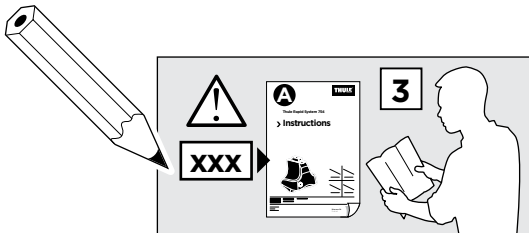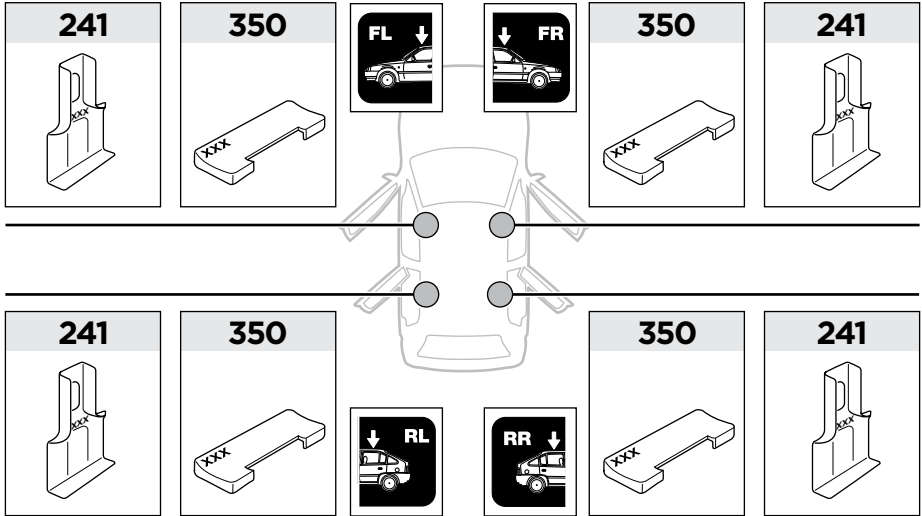

3

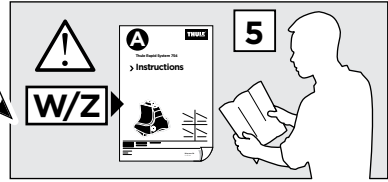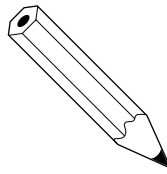

	W (mm)	Z (mm)	W (inch)	Z (inch)
FORD Grand Tourneo Connect , 5-dr MPV, 14- *	930	750	36 5/8	29 1/2
FORD Tourneo Connect , 5-dr MPV, 14- *	880	630	34 5/8	24 3/4

